

Set the Time and Melody

1. Before inserting the batteries for the first time, set the clock hands to around 5:50. The hands do not need to be set exactly at 5:50 at this point, but get them as close as 5:50 as possible.
2. Insert the batteries according to (+) and (-) marking in the battery compartment. Once the hands are on and all 3 batteries are installed (or 2 batteries on some models), you can move the hands by turning the knob in the back. Turn the knob clockwise until the clock starts chiming then **stop**. At this point, the minute hand is set to the top of the hour and the movement should strike the hour of 6.
3. Always turn the hand **CLOCKWISE**. If you go counterclockwise, the clock will trigger the chimes to advance to the next hour ahead and not behind, making the hour hand and chiming out of sequence.
4. As you advance the time manually, the movement **WILL NOT** chime on the ¼ hours. The chimes will only work at the top of the hour at this point. Once the movement has had time to operate on its own, it will start to chime on the ¼ hours.

Song Selector: “f” This Movement has 3 songs only

AVE Maria: Plays parts of the song each quarter hour. At the top of the hour, it will play the song then strike the number of the hours.

4/4 Westminster (Big Ben): Allows the clock to play parts of the Westminster song on each ¼ hour and at the top of the hour striking the number of the hour.


Westminster SETTING: Allows the clock to play Westminster and strike the hour only. You will not hear the clock chime on the ¼ hours on this setting.

SOUND SETTINGS:


11:00pm - 5:45am setting: Allows the movement to stop chiming during these hours.

24 HR ON: Allows the movement to chime 24 hours a day

OFF: No chiming at all

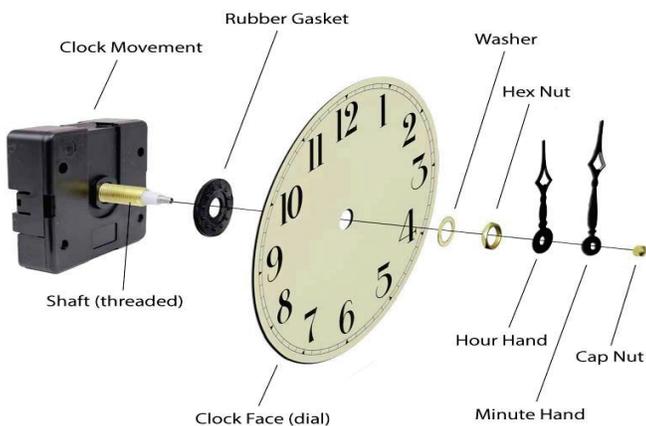

Hardware installation

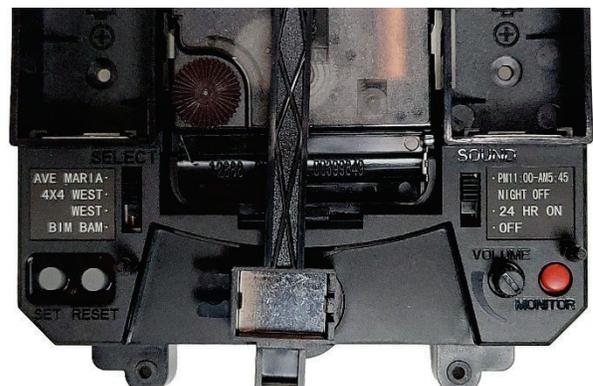

BATTERY CARE:

Change exhaust batteries immediately to avoid leakage & damage to the product. For models with “ALKALINE” marking in the battery compartment, Alkaline batteries are preferred.

In case the chime or melody stops or sounds distorted, replace the batteries and reset the clock again. Weak batteries account for 98% of issues for these movements. Please always use good quality new batteries in the movement.

More information is available on our website. Please check back often. As we get questions, we will add videos and additional information. Please feel free to contact us with any questions of your own, or if you need technical assistance.

